

Manual, Assembly instruction: **Brodit 216327**

Magnetic wireless charger, compatible with Apple MagSafe devices + accessories. Cig-plug adapter with 2 USB ports: Type-C + Type-A. With support under the device.

1.) 2.)



3.) 4.)



Please read all of the instructions and look at the pictures before attaching the holder. 1. Loosen the screw in the center of the mount so you can remove the tilt swivel attaching plate on the back. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws. Place the mount over the attaching plate so the screw fits in the hole in the tilt swivel and screw it into place. Tighten the screw so the mount is firmly in place, but still can be adjusted. 2. To adjust the mount for your device: Place the Magnetic Charger on your device. Place the device above the mount and adjust the support. Tighten the screws on the front side of the mount. 3. Carefully press the Magnetic Charger downward and forward so it goes into the mount, tighten the fixing screw. Remove the Magnetic Charger from the mount: First loosen the fixing screw then push the Magnetic Charger out of the mount. 4. The mount is in place. The mount to hold an Magnetic Charger is designed for use in ordinary driving conditions. Please be aware that in certain situations, such as driving on bumpy roads or a sudden braking + maneuvering of a vehicle, it is possible that the Magnetic Charger device may be dislodged from the mount holding it. Use of the mount holding an Magnetic Charger is at the user's sole discretion and risk. Brodit AB is not responsible for any damage caused by a device being dislodged from the mount holding a Magnetic Charger.