

Manual, Assembly instruction: Brodit 521941

Adjustable holder. Micro USB. USB-cable with cig-plug adapter. With tilt swivel and fly lead. Fits devices with or without skin/case, with height 140-195 mm, max thickness 25 mm.

1.)



2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the holder. 1. Connect the charging cable to the device. Choose which way you want to use your device in the holder. Press the charging cable into place in the enclosed cable mount and place the cable mount over the predrilled holes on back of the holder, choose direction/side depending on how you want to run the cable. Make sure the cable is long enough to be connected to the device. Screw the cable mount onto the holder with the enclosed screws. 2. Loosen the screw in the center of the holder and remove the tilt swivel attaching plate on the back. Place the attaching plate onto the desired position and screw it into place with the enclosed screws. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel. Tighten the screw until the holder is firmly in place, but still can be adjusted. 3. Place device in holder: Place the upper part of the device under the upper part of the holder. Press upward so the upper part of the holder slides upwards. Press the lower part of the device forward so the device is placed straight in the holder. Stop pressing upward so the upper part of the holder slides downward and rests on the device. Press downwards **HARD** on top of the holder, in the same time tighten the wingnut on the back of the holder **FIRMLY**. **IMPORTANT:** It is very important to press downward **HARD** on top of the holder and to tighten the wingnut **FIRMLY** so the device is properly held in place in the holder. Remove device from holder: Loosen the wingnut. Press the device upward so the the upper part of the holder slides upward. Lift the device downward and out of the holder. 4. The holder is in place.