

Manual, Assembly instruction: Brodit 735278

With USB Type-C + cig-plug adapter with 2 USB ports: Type-A and Type-C. With tilt swivel. 12/24 Volt. 2 keys included.

1.)



2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the holder.

1. Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel. Screw the holder onto the attaching plate. Tighten the screw so the holder is firmly in place, but still can be adjusted.

2. Slide the device sideways carefully into the holder. Press the lock sideways onto the left part of the holder. Press the button to lock.

3. Use the enclosed key to open the lock. Remove the lock by sliding it sideways away from the holder. Slide the device sideways out of the holder.

4. The holder is in place. Switch between portrait and landscape mode by turning the holder into desired position.