



Manual, Assembly instruction: Brodit 735387

Active holder with cig-plug and tilt swivel. Fits for devices with original skin. 2 keys included. With USB Host Type-A. With Easy-switching system. Charger via pogo pins. With AMPS, VESA 75 holes.

1.)

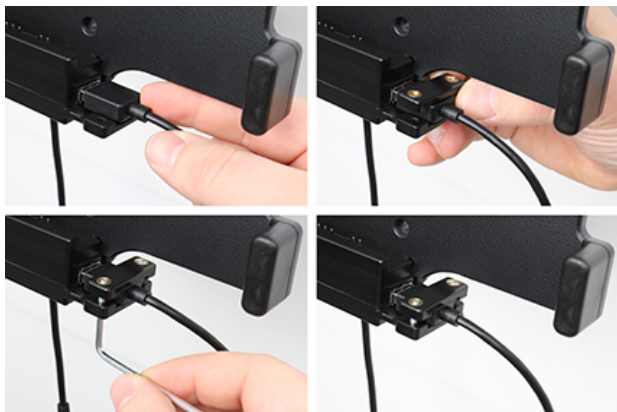

2.)

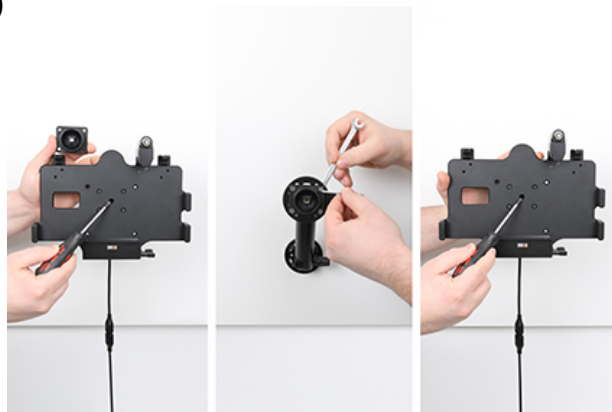

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the holder.

1. Connect device via USB Host. Press the cable into the socket, place the cable socket over the pre-drilled holes, screw the cable socket with the enclosed screws.

2. Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel. Tighten the screw until the holder is firmly in place, but still can be adjusted.

3. To place the device in the holder: Use the enclosed key to open the lock. Place the lower part of the device in the holder, then flip/press the upper part forwards so it snaps into place in the holder. Press the lock downward. Press the button to lock. To remove the device from the holder: Use the enclosed key to open the lock. Slide the lock upward. Press upwards on the upper part of the holder, in the same time pull the upper part of the device out from the holder and then lift the device up and out from the holder.

4. The holder is in place.