

Manual, Assembly instruction: Brodit 854933

Angled mount ONLY for models without navigation screen.

1.)



2.)



3.)



4.)



Please read the instructions and look at the pictures carefully before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the angled edge on the lower side of the ProClip into the gap or slot above the CD player.
2. Push firmly forward on the faceplate so the ProClip flexes forward. At the same time with your other hand press down on the forward angled edge. Press forward and down until the angled edge clips into the seam just before the information screen.
3. Press down on the forward edge to ensure the edge is securely in place.
4. The ProClip is in place.