

Manual, Assembly instruction: Brodit 213458

Extra strength mounting platform.


1.)



2.)



3.)

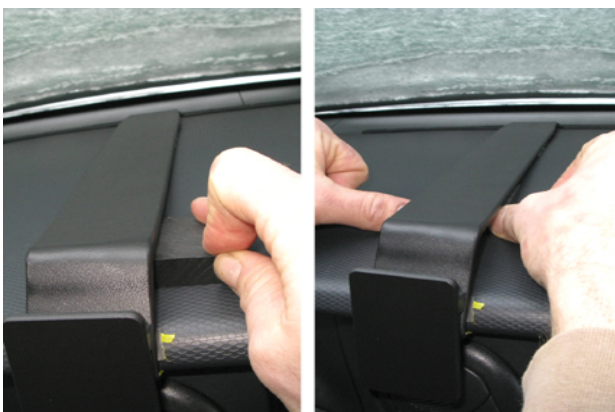

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. It is very important to place the ProClip in the exact same position as shown in the pictures. This ProClip consists of two parts. Part 1. Mount with face plate Part 2. Mounting distance plate (the smallest part)

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on Part 1. Place the upper end of Part 1 next to the air vent, on the left side of the air vent. Hook the angled edge into the gap between the dashboard and the panel below the windshield.

2. Pull Part 1 toward you and hook the angled edge under the dashboard overhang

3. Peel off the adhesive tape covers on Part 2. Hold Part 2 so the thinner end is facing the windshield. Place Part 2 next to Part 1 and press it sideways into the space between Part 1 and the dashboard. Do not allow the adhesive tapes to attach yet. Press Part 2 forward as far as possible so Part 1 flexes and is locked into place when the adhesive tapes on Part 2 attach.

4. The ProClip is in place.