


Manual, Assembly instruction: **Brodit 213460**

Center mount. Extra strength mounting platform. NOT for Business X.

1.)

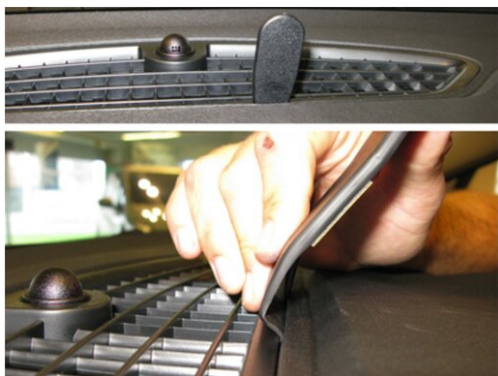

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the air vent and the dashboard, to widen the gap. Peel off the adhesive tape cover on the ProClip. Press the curved edge on the upper part of the ProClip into the gap next to the Gap Opener (Spaltöffner).
2. Flip the ProClip downward so the upper curved edge hooks under the air vent. Pull out the Gap Opener (Spaltöffner). Press the Gap Opener (Spaltöffner) into the gap between the control panel and the dashboard. Place your thumbs on the front side of the ProClip and your index fingers behind the lower part. Pull our index fingers toward you and hook the angled lower edge into the gap next to the Gap Opener (Spaltöffner).
3. Press forward on the lower part of the ProClip so the angled edge goes all the way into the gap. Pull out the Gap Opener (Spaltöffner).
4. The ProClip is in place.