


Manual, Assembly instruction: Brodit 213465

Center mount, Extra strength mounting platform.

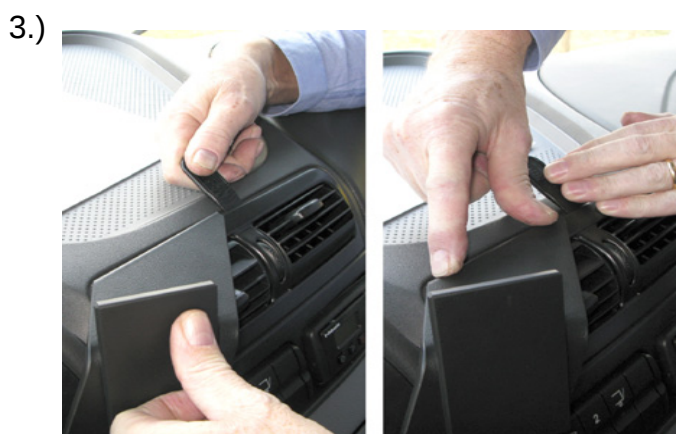

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the upper and lower section of the dashboard, to widen the gap. Peel off the adhesive tape covers on the ProClip. Press the curved edge on the lower part of the ProClip into the gap next to the gap opener.

2. Flip the ProClip upward/forward so the curved edge on the lower part hooks behind the lower section of the dashboard. Pull out the gap opener.

3. Press the gap opener into the gap between the frame surrounding the air vent and the dashboard. Hold the gap opener in the gap and press it forward to widen the gap. In the same time: press forward on the upper part of the ProClip so the angled upper edge hooks into the gap next to the gap opener. Press downward/toward you on top of the ProClip so the angled edge hooks behind the frame surrounding the air vent. Pull out the gap opener.

4. The ProClip is in place.