


Manual, Assembly instruction: Brodit 213500

Center mount Extra strong mounting platform.

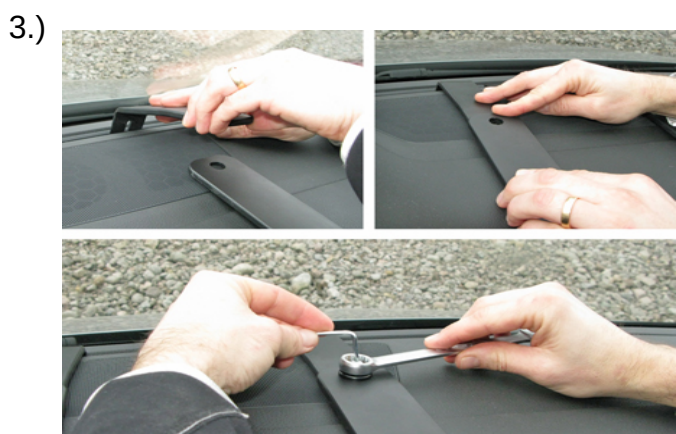

Please read the instructions and look at the pictures carefully before installing the bracket. This mounting bracket consists of three parts: Part 1 main part with mounting plate. Part 2 and 3 - support arms.

1. Press the angled edges on the main part of the bracket into the gap between the frame surrounding the stereo and the dashboard.

2. Press/flip the main part forward so the angled edges hook behind the panel properly and the arms of the main part are resting on the dashboard.

3. Insert the front part of both support arms into the air vent by the windshield. Align the back part of the support arms with the arms of the main part. The support arms should rest below the arms from the main part. Lock the arms into place by tightening the large nuts. Important not to pull too hard! Then fixate the locking by using an Allen key.

4. The bracket is in place.