

Manual, Assembly instruction: Brodit 213501

Center mount


1.)



2.)



3.)

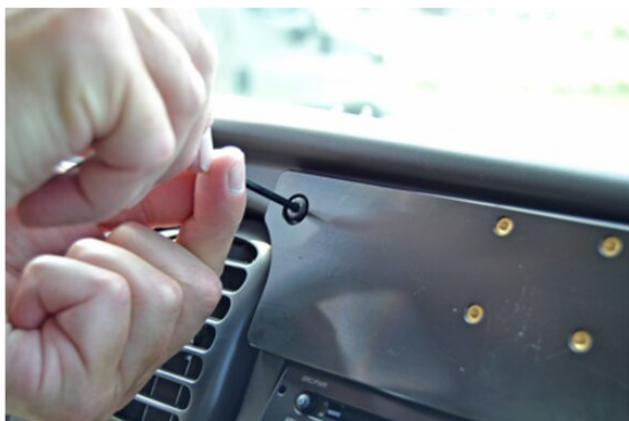

4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Remove the two screws above the upper right and left corners of the storage compartment on the center dash.
2. Insert the ProClip into the space in front of the storage compartment, making sure the holes on the corners of the ProClip align with the holes on the dash.
3. Fasten the ProClip by inserting the screws into the holes where they were removed.
4. The ProClip is in place.