


Manual, Assembly instruction: Brodit 213510

Center mount, Extra strength mounting platform.


1.)

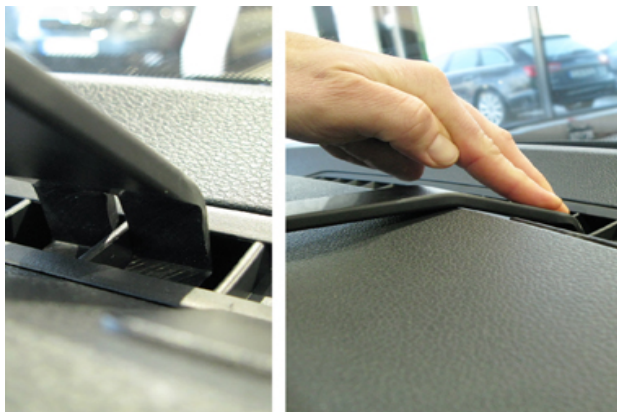

2.)



3.)

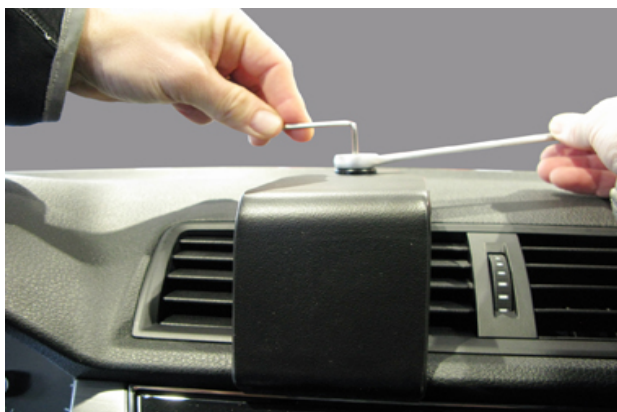

4.)



Please read all of the instructions and look at the pictures before attaching the mount.

1. Carefully, pull the parts of the mount apart until the mount reaches maximum length. Press the thin end of the enclosed gap opener into the gap between the dashboard and the frame surrounding the control panel, to widen the gap. Hook the angled edge on the upper part of the mount into the air vent by the windshield, hook it into the first and second opening counting leftward from the center.

2. Hook the angled edge on the lower part of the mount into the gap next to the gap opener. Pull out the gap opener. Press the parts of the mount together until the mount reaches minimum length and hooks into place properly.

3. Tighten the nut on the top of the mount so the parts are pulled together so the mount is firmly in place. Tighten the Allen screw with the enclosed key in order to fixate the position.

4. The mount is in place.