


Manual, Assembly instruction: Brodit 213577

Angled mount, Extra strength mounting platform

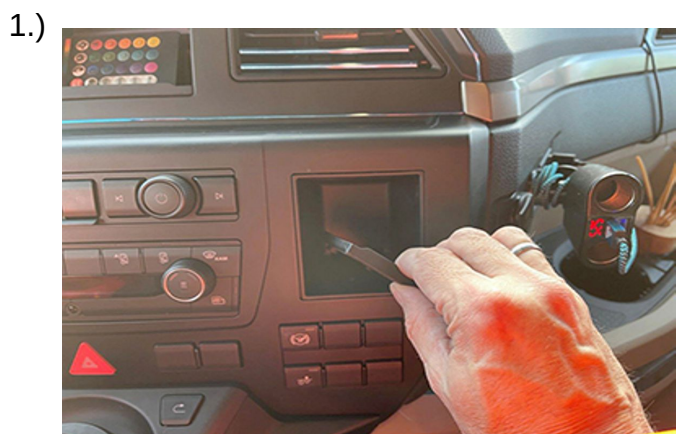

Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts: Part 1. Attaching part. Part 2. ProClip face plate.

1. Remove the rubber mat in the storage compartment. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed.

2. Remove the protective plastic on the double-sided tape strips on part 1. Place the notches on Part 1 into the three holes on the left side of the compartment.

3. Press downwards so that the protruding parts go completely into the holes.

4. Pull part 1 towards you, simultaneously screw part 2 on part 1 with the screws. It is important to continue pulling part 1 throughout the time that you tighten the screws so that the protruding parts will hook firmly into the holes. The ProClip is in place.