


Manual, Assembly instruction: Brodit 216059

Keyboard and tablet mount. With VESA 75/100 + multiple 5 mm AMPS holes. Material: Metal.


1.)



2.)

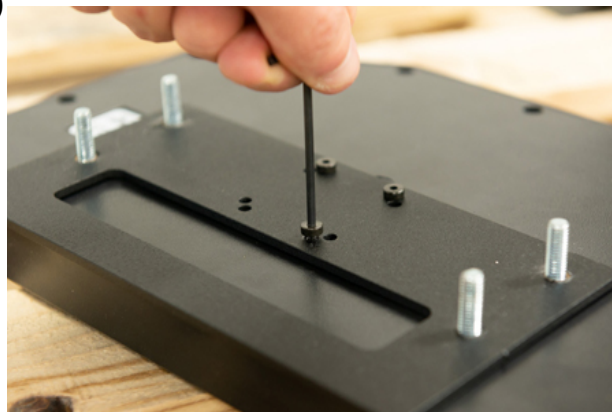

3.)

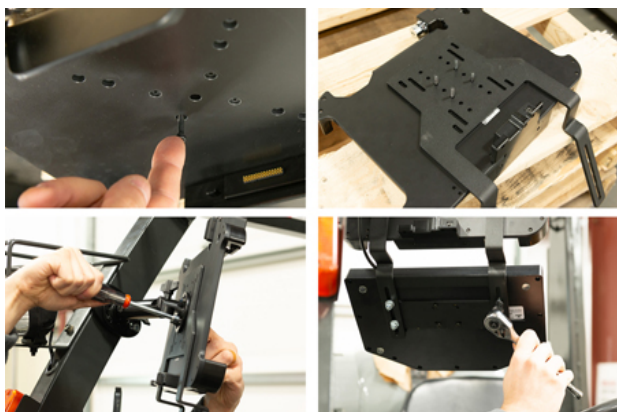

4.)



Please read all of the instructions and look at the pictures before attaching the products. 1. To install a keyboard WITHOUT AMPS holes: Place the keyboard on the keyboard shelf and cut Velcro pieces in appropriate lengths. Peel off the adhesive tape covers on the Velcro. Attach the Velcro pieces in matching positions on the keyboard and the keyboard shelf. Place the keyboard onto the keyboard shelf so the Velcro pieces attach properly.

2. To install a keyboard WITH AMPS holes: place the keyboard shelf over the keyboard so the AMPS holes match. Attach the keyboard onto the keyboard shelf with the enclosed screws.

3. To install a device holder: Place the enclosed screws in the AMPS holes in the holder so they stick out on the back of the mount, make sure the screws are long enough for your mounting scenario. Place the holder into desired position and attach it with the enclosed nuts. To install a device with VESA 75/100 holes: Place the mount onto the device and attach it with the enclosed screws. Place the mount into desired position and attach it with the enclosed screws. To install the keyboard shelf: Place the keyboard shelf onto the mount and attach it with the enclosed nuts. Adjust the position and tighten the nuts.

4. The product is in place.