


Manual, Assembly instruction: Brodit 216139

Mounting kit: Two headrest mounts + Mounting plate with Vesa 75/100+ multiple AMPS holes. 120x120 mm, thickness 9 mm. Fits headrests with dimensions between the bars: Min. inner size 95 mm, Max. outer size 211 mm.

1.)

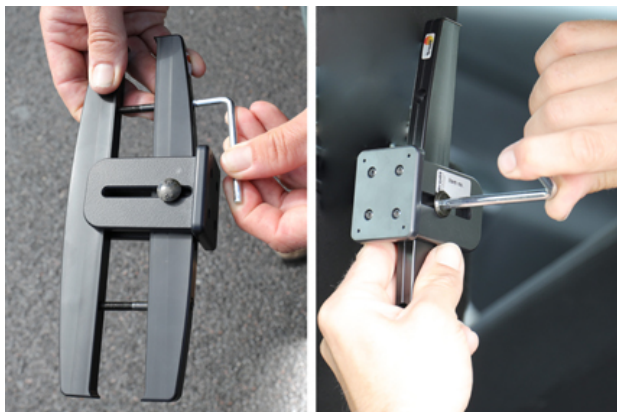

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the headrest mount.

1. Use the enclosed tool to remove the screws in one of the headrest mounts so you get two parts. Place the back part of the headrest mount onto the front side of the headrest. Place the other part of the headrest, equipped with a mounting plate, onto the back part of the headrest mount so the screws match the holes. Tighten the two screws a little bit, just so the headrest mount is in place.

2. Use the other enclosed tool to loosen the screw underneath the headrest mount. Adjust the mounting plate into desired position. Tighten the screw underneath the headrest mount so the mounting plate is firmly in place. Adjust the height of the headrest mount into desired position. Tighten the screws so the headrest mount is firmly in place.

3. Attach the other headrest mount the same way. Attach the mounting plate with the enclosed screws.

4. The headrest mount is in place.