


Manual, Assembly instruction: Brodit 216328

Key lock module, 2 keys included, for Module Upgrade holders. For devices with original skin.

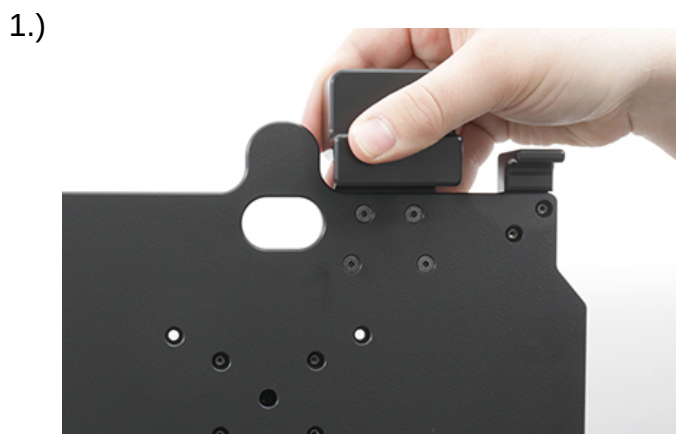

Please read all of the instructions and look at the pictures before attaching the holder.

1. Place the lock module behind the holder so the screws fits in the holes.

2. Tighten the screw so the lock module is firmly in place.

3. To place the device in the holder: Place the lower part of the device in the holder, then flip/press the upper part forward so it snaps into place in the holder. Push the lock block downward and press the button to lock. To remove the device from the holder: Use the enclosed key to open the lock. Slide the lock block upward. Press upwards on the upper part of the holder, in the same time pull the upper part of the device out from the holder and then lift the device up and out from the holder.

4. The holder is in place.