


Manual, Assembly instruction: Brodit 216347

With Fanfold slot.

1.)

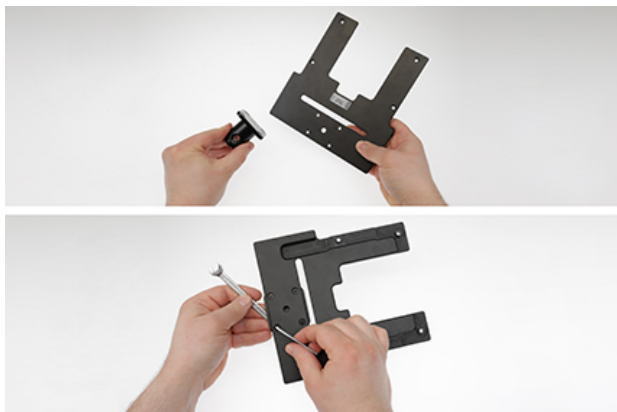

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the product.

1. Position the Pm bracket so that the holes on the printer bracket line up. Secure with the included screws.
2. Loosen the screws in the printer. Place the mount onto the device so the holes match.
3. Screw the bracket onto the printer.
4. The product is in place.