

Manual, Assembly instruction: Brodit 216417

Key Lock Module. Two keys included. For use with ModTek Docks.


1.)



2.)



3.)

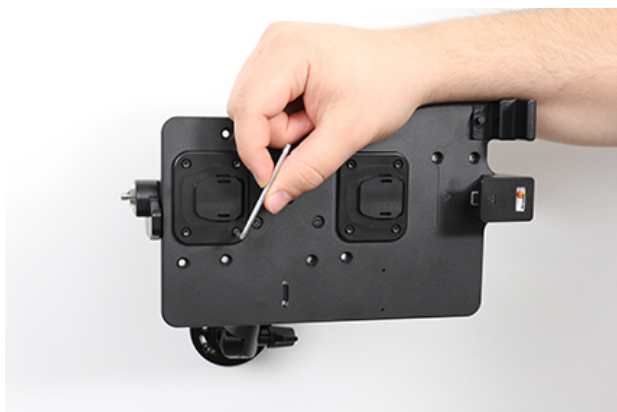

4.)



Please read all of the instructions and look at the pictures before attaching the module.

1. Remove Left Mount Point: Using the included tool, remove the 4 fasteners that secure the left mount point to the dock.

2. Install Key Lock Module: Using the fasteners included, install the lock module by securing it to the back of the dock through the 2 pre-drilled holes and the included Allen Key.

3. Re-Install Left Mount Point: Using the included tool, replace the left mount point and tighten the screws to finger tight.

4. Using the lock: Rotate the lock toward the Hard Case to secure the tablet while docked. Press the center pin to engage the lock. Use the included pair of keys to unlock, insert the key and rotate it until the center pin pops up. Rotate the lock away from the hard case until it is out of the way of the Hard Case.