


Manual, Assembly instruction: Brodit 216492

Key lock module, 2 keys included.

1.)

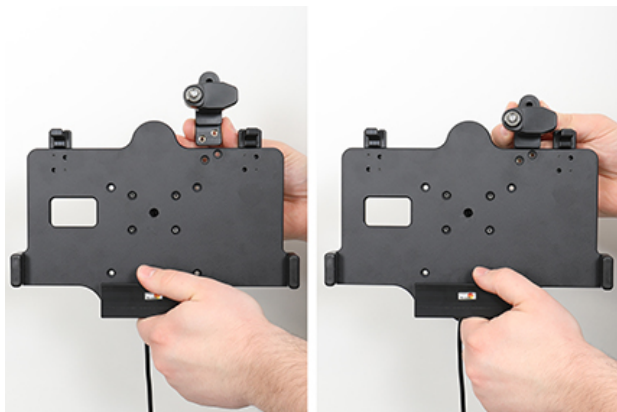

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the holder.

1. Place the lock module behind the holder so the screws fits in the holes.

2. Tighten the screw so the lock module is firmly in place.

3. To lock: Push the lock block sideways and press the button. Use the enclosed key to open the lock. Slide the lock block sideways.

4. The mount is in place.