

Manual, Assembly instruction: Brodit 217060


1.)



2.)



3.)

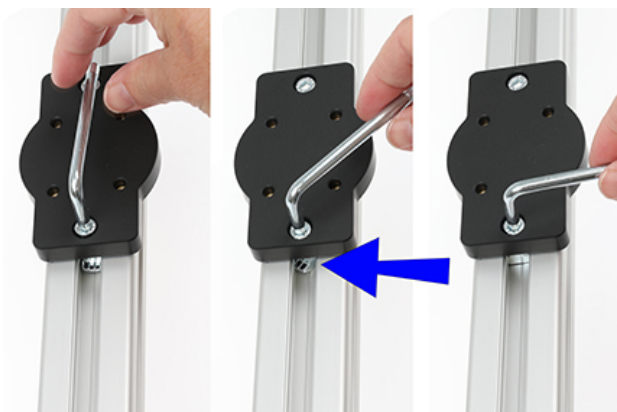

4.)



Please read all of the instructions and look at the pictures before attaching the holder.

1. Place the included screws and T-Nut locking as shown.
2. Place the mount over the aluminum profile so that the T-Nut locks are in the groove.
3. Tighten the screws so that the mount is firmly in place.
4. The mount is fully assembled.