


Manual, Assembly instruction: Brodit 217268

Forklift mount with heavy duty Pedestal Ball Mount, 194 mm. Fits rods, poles, tubes, plates, pipes with thickness 5-130 mm and width max 97 mm screws, nuts, washers and Allen keys included. AMPS holes.

1.)

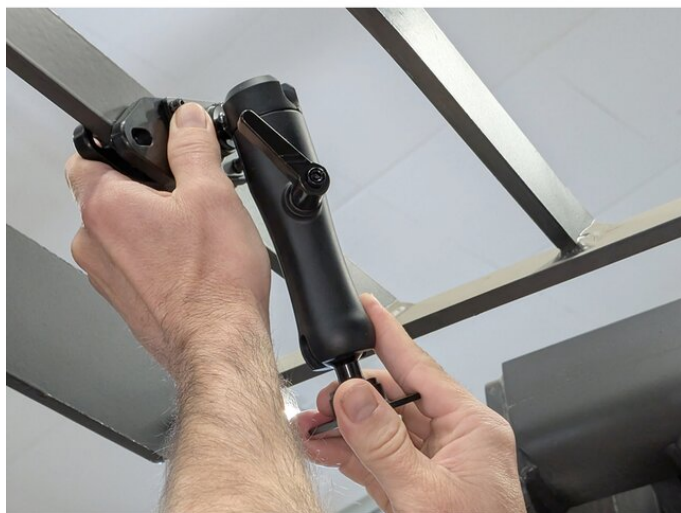

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the mount.

1. Position the mount at the desired installation location and select suitable bolts according to the thickness of the bar. For thinner bars: Use two bolts together with two washers and two locking nuts. For thicker bars: Use four bolts and two hex coupling nuts.
2. Securely fasten the mount in place.
3. Loosen the lever and adjust the mount angle to the desired position. Tighten the lever to lock the mounting plate securely in place.
4. The mount is now fully installed and ready for use.