

Manual, Assembly instruction: Brodit 313571

Center mount, Extra strength mounting platform


1.)



2.)



3.)

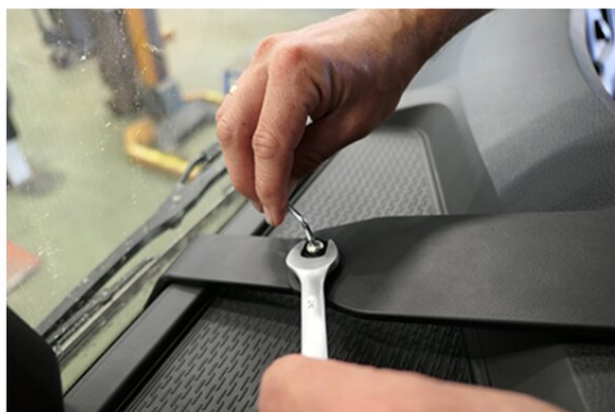

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip first: any holder + equipment is to be attached after the ProClip is in place.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Hook the lower edge of the ProClip over the dashboard overhang.
2. Hook the U-shaped upper edge of the ProClip into the air vent so the groove hooks over the vent that the arrow points at. Press the parts together so the ProClip is properly in place.
3. Tighten the nut on top of the ProClip so the parts are pulled together, and tighten the screw to lock the position.
4. The ProClip is in place.