


Manual, Assembly instruction: Brodit 604332

Right mount

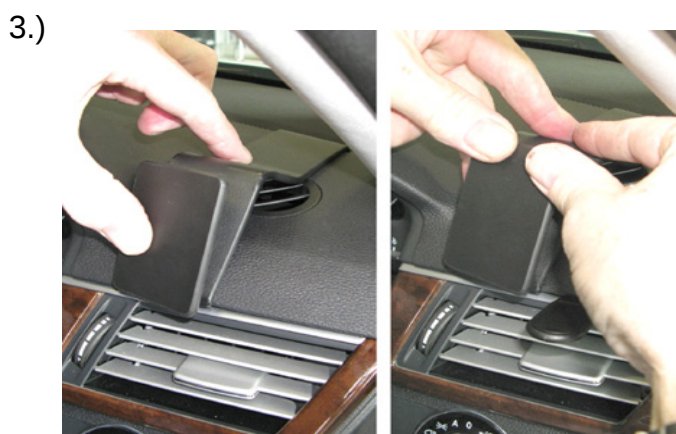

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the speaker vent and the dashboard, to widen the gap. Peel off the adhesive tape cover on the ProClip.

2. Press the curved edge on the upper part of the ProClip into the gap next to the gap opener. Flip the ProClip downward so the curved upped edge hooks under the speaker vent. Pull out the gap opener.

3. Press the gap opener into the gap between the frame surrounding the air vent and the dashboard. Hook the angled edge on the lower part of the ProClip into the gap next to the gap opener. Press forward on the lower part of the ProClip so the angled edge goes all the way into the gap. Pull out the gap opener.

4. The ProClip is in place.