

Manual, Assembly instruction: Brodit 605287

Right mount

1.)




2.)



3.)



4.)

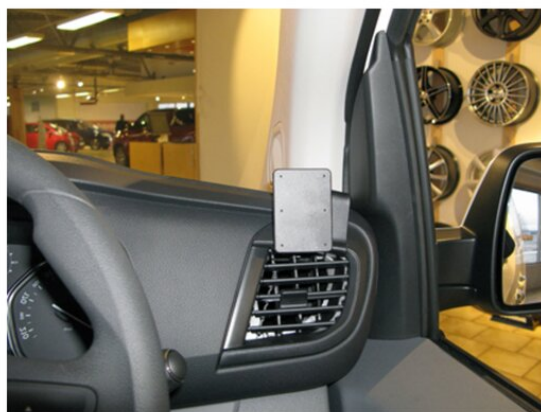

Please read all of the instructions and look at the pictures before installing the ProClip.

1. Insert the thin end of the both Gap Opener (Spaltöffner)s into the gap on top of the dashboard, to widen the gap. Start by inserting the right one, otherwise the gap will be too tight for the left one. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape covers on the ProClip.
2. Hook the angled lower edge of the ProClip around the edge on the upper side of the airvent.
3. Push + pull the ProClip upward + forward until the angled upper edge goes into the gap between the Gap Opener (Spaltöffner)s. Press the upper part of the ProClip downward so the angled edge goes all the way into the gap. Remove the Gap Opener (Spaltöffner)s.
4. The ProClip is in place.