


Manual, Assembly instruction: Brodit 653324

Angled mount

1.)

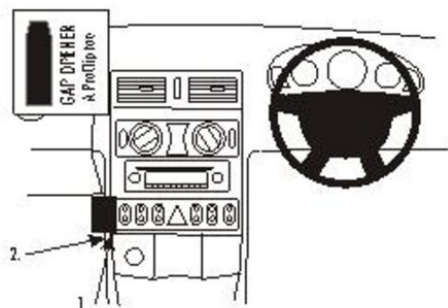

Attention! Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the center console panel frame and the console edge, to widen the gap. Peel off the cover of the adhesive tape on the ProClip.
2. Press the curved edge on the right side of the ProClip into the gap above to the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner) and slide the ProClip down to the place where the Gap Opener (Spaltöffner) was placed.
3. Press the thin end of the Gap Opener (Spaltöffner) into the gap between the console edge and the sidewall, to widen the gap. Press firmly forward on left side of the ProClip, towards the Gap Opener (Spaltöffner) so the angled edge hooks into the gap next to the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner).
4. The ProClip is in place.