

Manual, Assembly instruction: Brodit 654752

Center mount


1.)



2.)



3.)

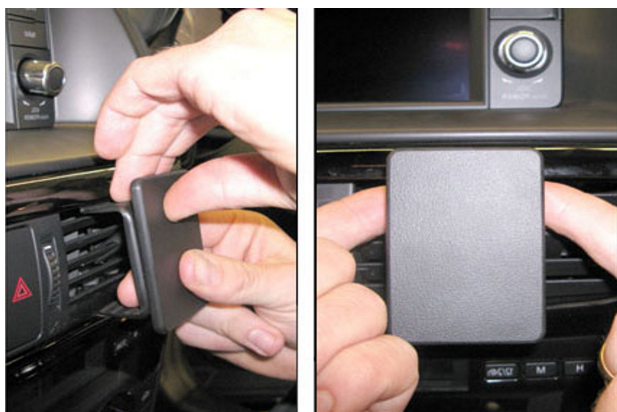

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. NOTE: It is very important to install this ProClip in the exact same position as shown in the pictures.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the angled edge into the gap between the airvent and the surrounding frame.

2. Press downward on the lower part of the ProClip so the angled edge goes all the way into the gap.

3. Press the upper part of the ProClip downward and then push it forward. Hook the angled upper edge into the gap between the airvent and the surrounding frame. Press upward on the upper part of the ProClip so the angled edge goes all the way into the gap.

4. The ProClip is in place.