


## Manual, Assembly instruction: Brodit 654996

Angled mount NOT for models with wood panel. ONLY for automatic gear shift.


1.)

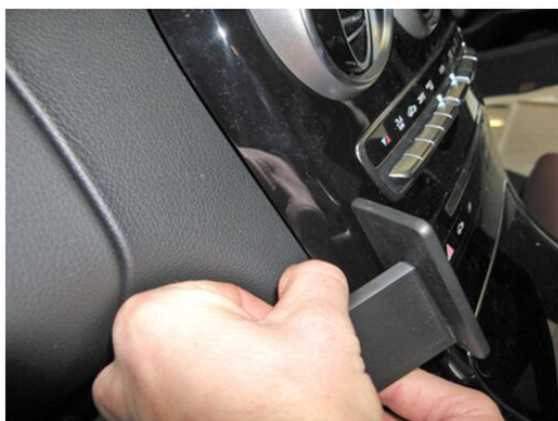

2.)



3.)

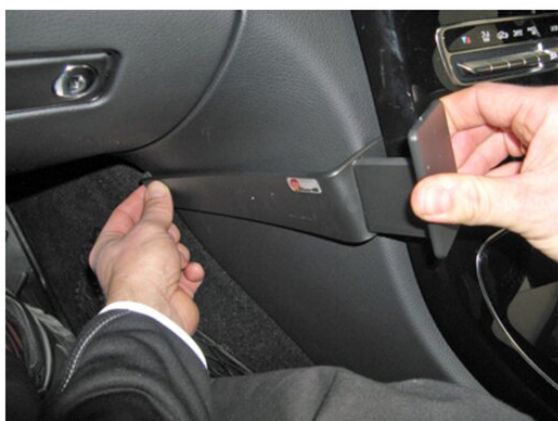

4.)



**Please read the instructions and look at the pictures before installing the ProClip.**

1. Align the angled right edge of the ProClip with the gap between the center console and dashboard. Press inward on both corners of the angled edge to aid its entry into the gap.
2. Press the ProClip rightward so the angled edge goes all the way into the gap.
3. Press the ProClip forward + downward and hook the left angled edge around the edge of the dashboard.
4. The ProClip is in place.