


Manual, Assembly instruction: Brodit 655166

Center mount

1.)

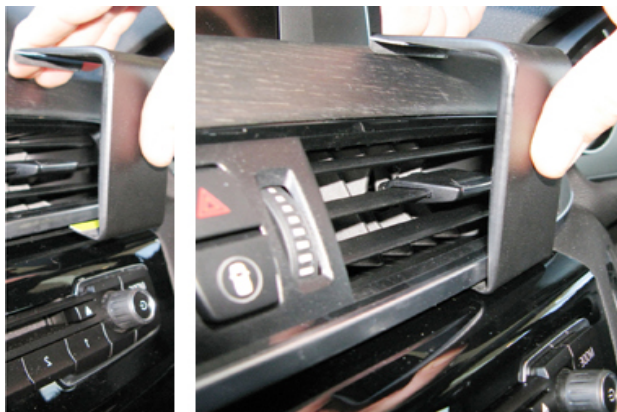

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Press the lower edge of the ProClip into the gap between the frame surrounding the air vent and the panel surrounding the stereo.
2. Pull the upper part of the ProClip upward and hook the angled edge over the frame surrounding the air vent. Press downward on top of the ProClip so the adhesive tape attaches properly.
3. The ProClip can be placed anywhere within the width of the stereo.
4. The ProClip is in place.