


Manual, Assembly instruction: Brodit 655197

Center mount ONLY for automatic transmission.

1.)



2.)

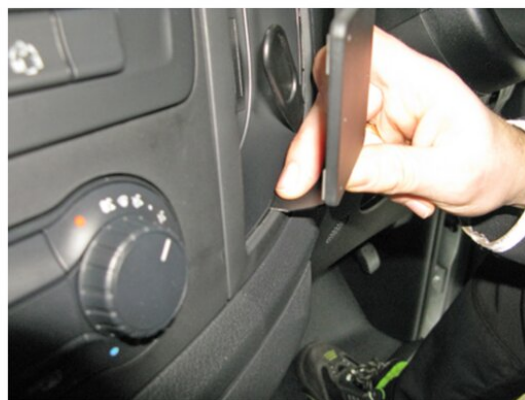

3.)



4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Insert the thin end of the enclosed Gap Opener (Spaltöffner) into the gap on the inside of the center console storage compartment, to widen the gap. Remove the adhesive tape cover on the ProClip.
2. Insert the lower edge of the ProClip into the gap next to the Gap Opener (Spaltöffner), slide the ProClip leftward so it aligns with the left side of the storage compartment sidewall.
3. Slide the Gap Opener (Spaltöffner) upward + rightward, widening the gap on the top of the storage compartment. Flex the ProClip downward and insert the upper edge of the ProClip into the gap on top of the storage compartment. Remove the Gap Opener (Spaltöffner).
4. The ProClip is in place.