

Manual, Assembly instruction: Brodit 655203

Angled mount


1.)



2.)



3.)

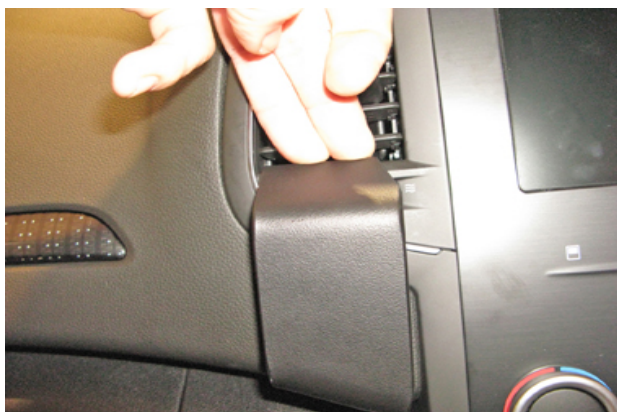

4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Insert the angled lower edge of the ProClip into the gap dividing the dashboard paneling.
2. Move the upper edge of the ProClip upward/forward so the lower angled edge hooks behind the paneling. Hook the angled upper edge of the ProClip into the gap in the lower edge of the air vent.
3. Press downward on the upper edge of the ProClip, so it goes all the way into the gap in the lower edge of the air vent.
4. The ProClip is in place.