


Manual, Assembly instruction: Brodit 655370

Angled mount

1.)



2.)

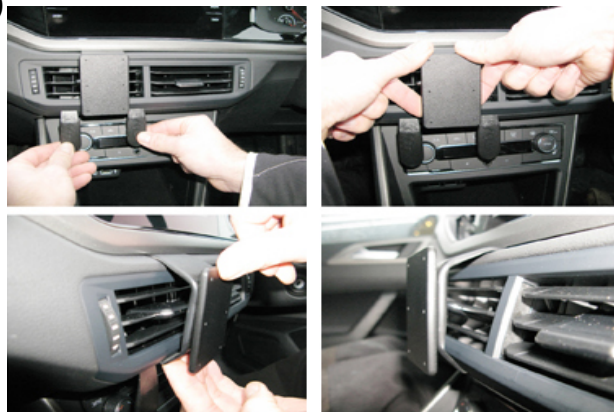

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of one of the enclosed gap openers into the gap between the dashboard surrounding the air vent and the dashboard surrounding the display, to widen the gap. Press the S-shaped edge on the upper part of the ProClip into the gap next to the gap opener. Press the ProClip forward, then press it downward so the upper edge hooks behind the dashboard surrounding the display. Pull out the gap opener.

2. Press both gap openers into the gap between the frame surrounding the air vent and the dashboard. Press the lower part of the ProClip away from the dashboard and hook the angled lower edge into the gap between the gap openers. Press upward in the lower part of the ProClip so the angled edge goes all the way into the gap. Pull out the gap openers.

3. This ProClip can also be placed onto right air vent. A device installed in this position may block the display.

4. The ProClip is in place.