


Manual, Assembly instruction: Brodit 655427

Angled mount

1.)

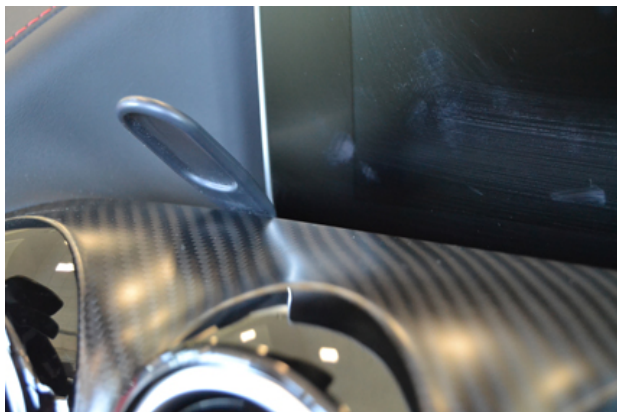

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed "Gap Opener" into the gap between the panel in front of the display and the panel surrounding the air vents, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip.
2. Press the lower edge of the ProClip, behind the face plate, into the upper part of the air vent.
3. Hold the mount up. At the same time press forward on the ProClip so it flexes. Hook the upper edge of the ProClip into the gap next to the gap opener. Pull out the gap opener.
4. The ProClip is in place.