


Manual, Assembly instruction: Brodit 655453

Center mount ONLY for models with JBL stereo.

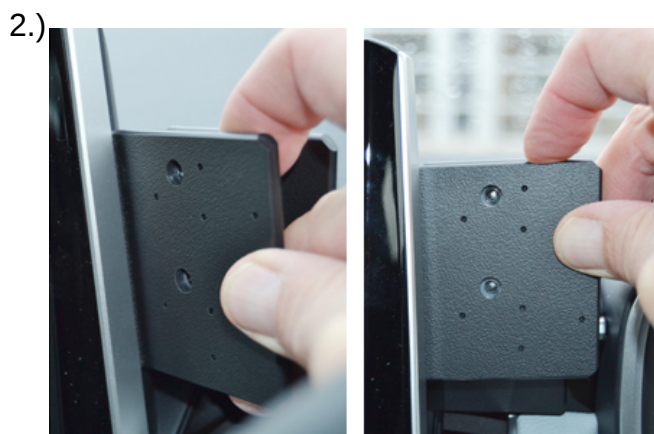

Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consist of two parts: Part 1: Attaching part Part 2: ProClip faceplate

1. Press the lower edge of Part 1 into the gap between the horizontal and the vertical trims in the dashboard.
2. Press the thin edge on the left part of Part 2 into the gap between the trim and the back panel of the display. Align the holes in Part 2 with the holes in Part 1.
3. Screw the two parts together. Screw the screws tight but be careful not to over tighten the screws.
4. The ProClip is in place.