


## Manual, Assembly instruction: Brodit 655679

Center mount

1.)

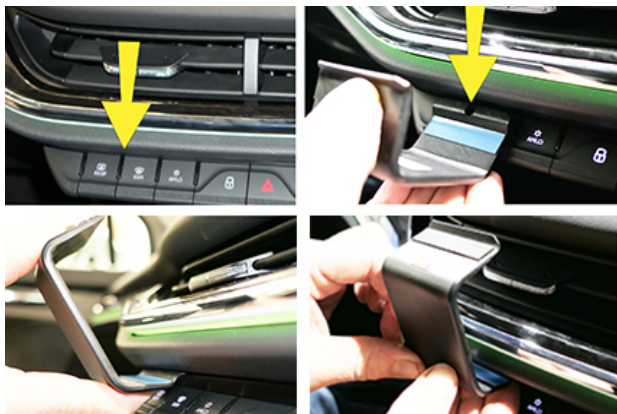

2.)



3.)



4.)



**Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip first: any holder & equipment is to be attached after the ProClip is in place.**

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Localize the button separator by the last/first button, see arrow on the picture. Place the U-shaped groove in the lower part of the ProClip exactly over the button separator. Press the angled edge into the gap between the trim and the dashboard. Press/Flip the upper part of the ProClip forward so the angled lower edge hooks behind the trim.

2. Press the upper part of the ProClip downward and hook the angled edge under the frame surrounding the air vent.

3. This ProClip can also be placed onto the right air vent.

4. The ProClip is in place.