

Manual, Assembly instruction: Brodit 655996

Center mount

1.)




2.)



3.)



4.)

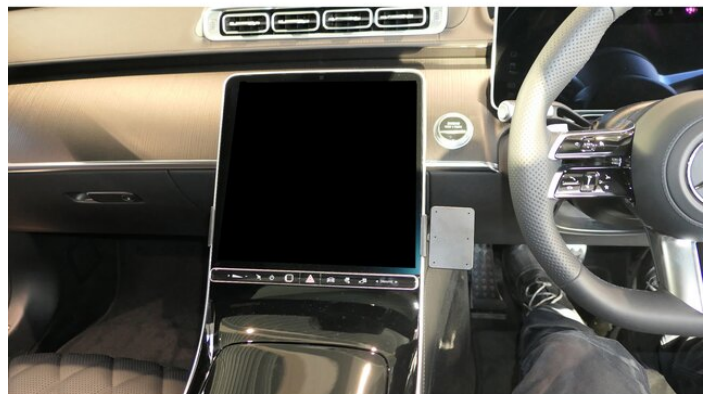

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Slide the ProClip behind the screen and hook the angled edge of the mount around the left side of the screen.
2. Bend the right part of the mount towards you.
3. Place the angled right part of the mount around the edge of the screen.
4. The ProClip mount is in place.