


Manual, Assembly instruction: Brodit 656111

Center mount Only for models with 8" screen.

1.)

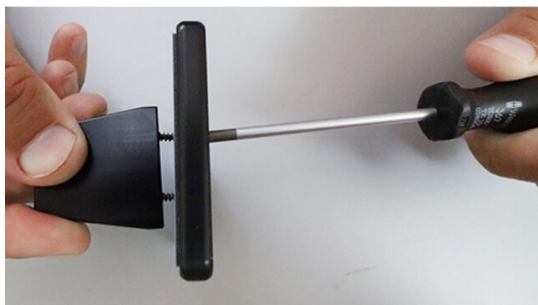

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Hold the face plate so the holes are placed on the upper half. Place the smaller part onto the back of the plate so the angle is pointing downwards. Attach the two parts together with the enclosed screws. NOTE: Do not tighten the screw, only attach the two parts together leaving a few millimeter space between them.

2. Hook the angled edge of the mount behind the edge in the compartment.

3. Tighten the screws so the mount sits properly in place.

4. The ProClip mount is in place.