

Manual, Assembly instruction: **Brodit 711438**

For device in Protective Rubber Boot (PRS3800X01507) with + without handstrap.


1.)




2.)



3.)

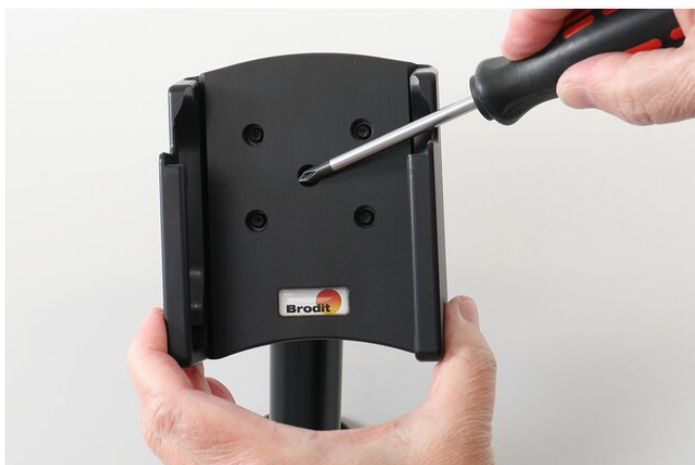

4.)

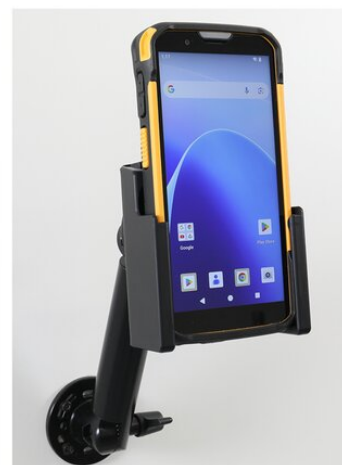

Please read all of the instructions and look at the pictures before attaching the holder.

1. Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back.
2. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws.
3. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel and screw it into place. Tighten the screw so the holder is firmly in place, but still can be adjusted.
4. The holder is in place.