


Manual, Assembly instruction: Brodit 803416

Left mount


1.)



2.)

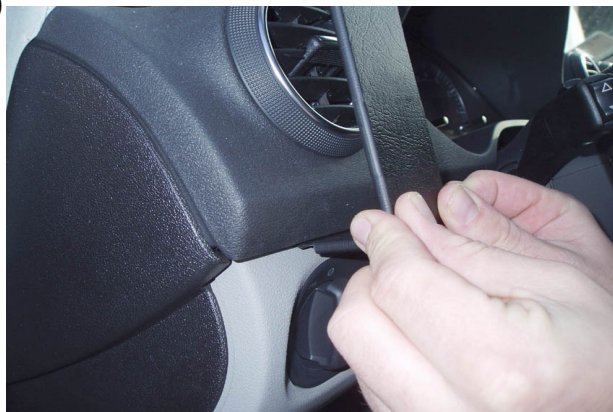

3.)

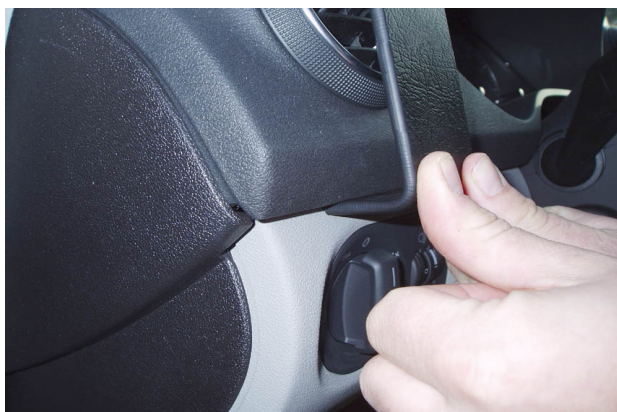

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the angled edge on the upper part of the ProClip into the gap between the frame surrounding the air vent and the dashboard.
2. Pull the ProClip downwards and press the grooved edge into the gap in the dashboard.
3. Press forwards on the lower part of the ProClip until you hear/feel the grooved edge snaps into place in the gap.
4. The ProClip is in place.