


Manual, Assembly instruction: Brodit 804265

Left mount Only for the old style dash.

1.)

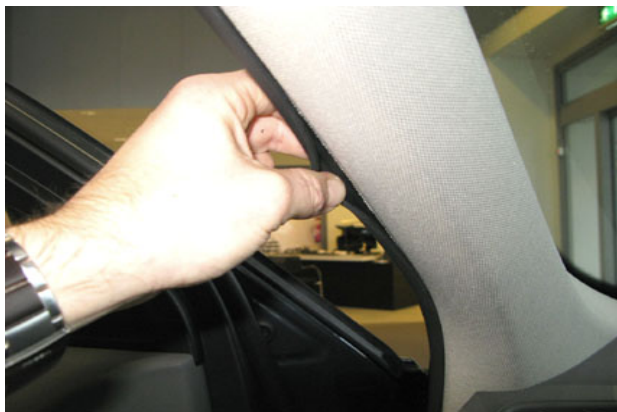

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Pull out the rubber sealent on the A-post to widen the gap slightly.
2. Press the angled edge on the lower part of the ProClip into the gap and hook it behind the A-post.
3. Press the ProClip upward/leftward so the angled upper edge hooks around the A-post by the windshield.
4. The ProClip is in place.