


Manual, Assembly instruction: Brodit 804268

Left mount

1.)

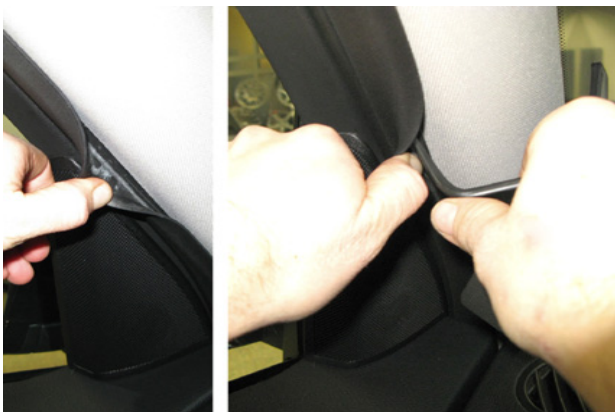

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off the adhesive tape cover on the ProClip. Pull out the rubber sealant on the A-post slightly. Press the angled edge of the ProClip into the gap and hook it around the A-post.
2. Press the ProClip upward/leftward so the angled edge hooks over the A-post by the windshield.
3. Press the upper part of the ProClip toward the A-post so the angled edge hooks into place properly.
4. The ProClip is in place.