

Manual, Assembly instruction: Brodit 804278

Left mount


1.)



2.)



3.)

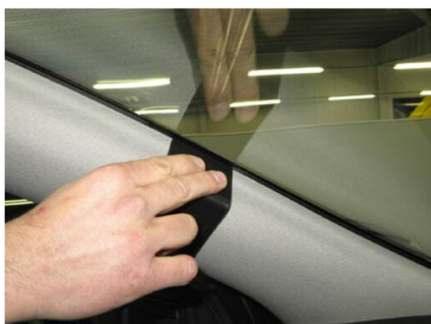

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. 1. Pull out the rubber sealant on the A-post slightly to widen the gap. 2. Press the angled edge on the ProClip into the gap and hook it behind the A-post. 3. Press the ProClip forward so the angled edge hooks around the A-post by the windscreen. Press the ProClip forward toward the A-post so the angled edge hooks into place properly. 4. The ProClip is in place.