


Manual, Assembly instruction: Brodit 804346

Left mount


1.)



2.)

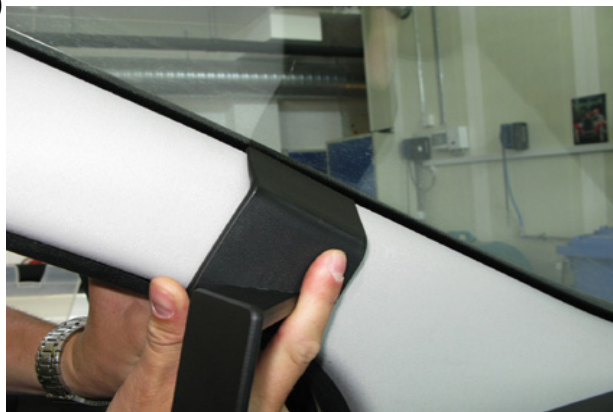

3.)

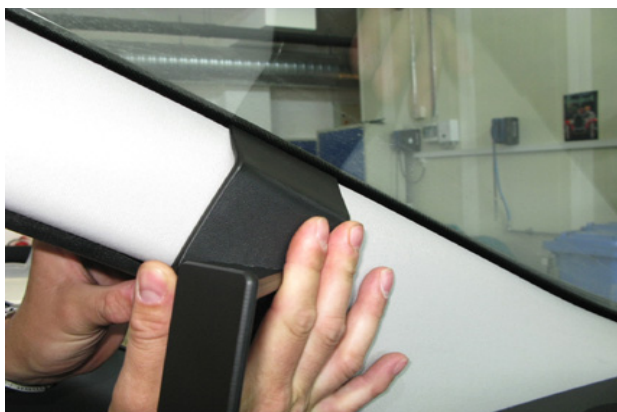

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Pull out the rubber sealant on the A-post and press the angled edge on the lower part of the ProClip into the gap. Hook the angled edge behind the A-post.
2. Press the ProClip forward/upward so the angled upper edge hooks around the A-post by the windshield.
3. Press the upper part of the ProClip leftward until you hear/feel that the angled edge snaps into place in the gap.
4. The ProClip is in place.