

Manual, Assembly instruction: Brodit 804675

Left mount, High.


1.)



2.)



3.)

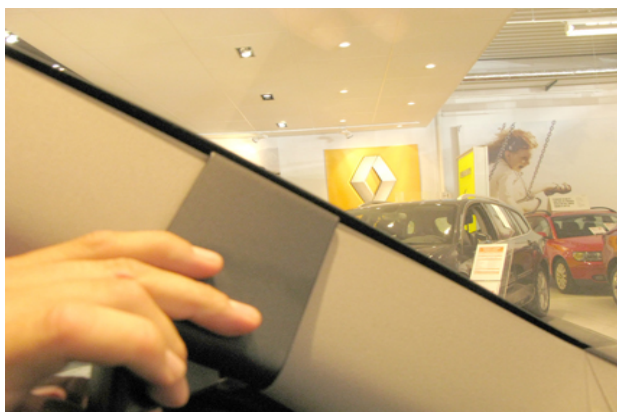

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off the adhesive tape covers on the ProClip. Pull out the rubber cover slightly.
2. Hook the angled edge on the ProClip around the panel, under the rubber cover.
3. Press the ProClip forward/toward the panel so the angled edge hooks around the panel by the windscreen. Press the ProClip toward the panel so the adhesive tapes attach.
4. The ProClip is in place.