Manual, Assembly instruction: Brodit 804741

Left mount

1.)

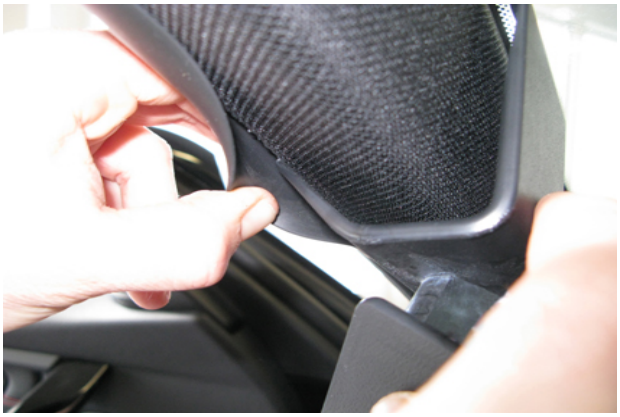

2.)

3.)

4.)

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Pull out the rubber sealent on the A-post slightly. Press the angled edge on the lower part of the ProClip into the gap and hook it around the A-post.

2. Hold the enclosed gap opener so the text is facing upward/forward, toward the windscreen. Press the thin end of the gap opener into the gap between the A-post and the windscreen to widen the gap.

3. Press the gap opener toward the windscreen to widen the gap a bit more. In the same time: press the angled edge on the upper part of the ProClip into the gap next to the gap opener. Pull out the gap opener.

4. The ProClip is in place.