

Manual, Assembly instruction: Brodit 804894

Left mount


1.)



2.)



3.)

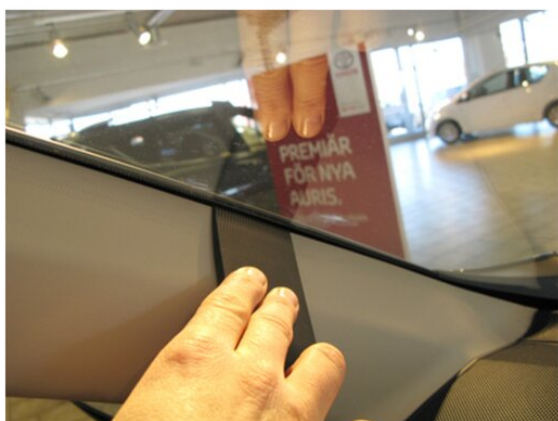

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Pull out the rubber sealent on the A-post slightly. Press the angled edge on the lower part of the ProClip into the gap.
2. Press the ProClip upward + forward so the angled upper part goes around the A-post.
3. Press the upper angled edge of the ProClip so the edge hooks around the A-post.
4. The ProClip is in place.