


Manual, Assembly instruction: Brodit 804994

Left mount


1.)

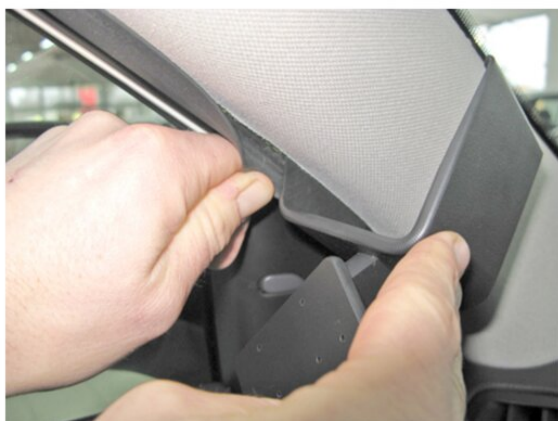


2.)



3.)

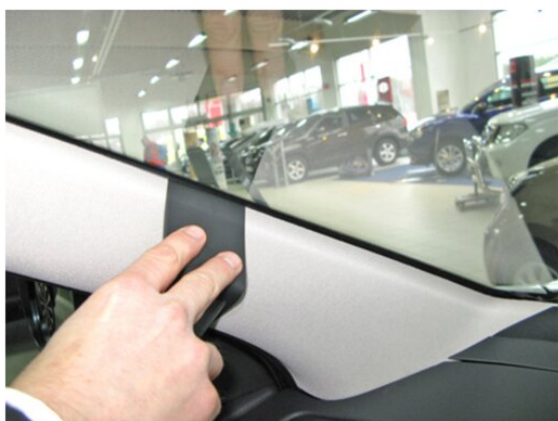

4.)

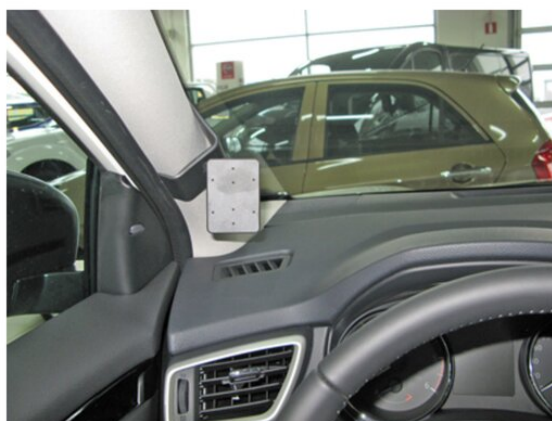

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Pull out the rubber sealant on the A-post slightly.
2. Press the angled edge on the lower part of the ProClip into the gap and hook it around the A-post.
3. Press the ProClip upward + forward so the angled upper edge hooks around the A-post.
4. The ProClip is in place.