


Manual, Assembly instruction: Brodit 805295

Left mount

1.)

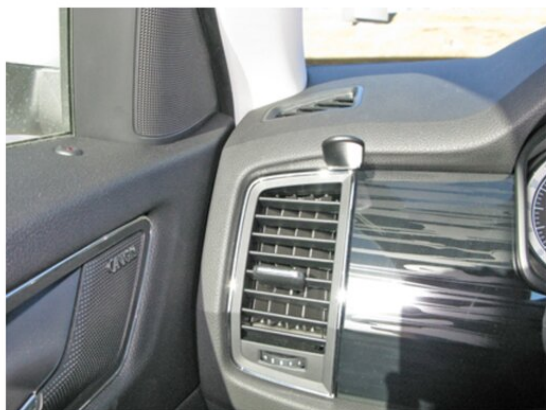


2.)



3.)



4.)

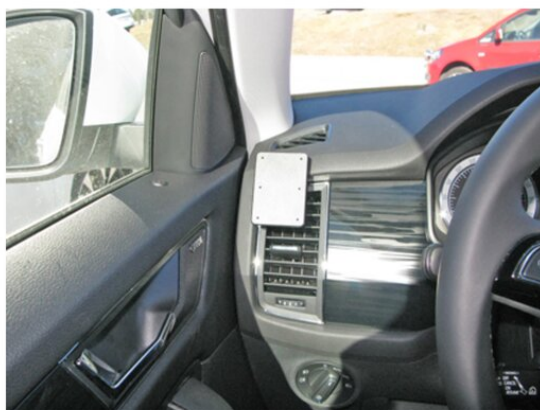

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Insert the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the frame surrounding the air vent and the dashboard, to widen the gap.
2. Press the upper edge of the ProClip into the gap next to the Gap Opener (Spaltöffner). Remove the Gap Opener (Spaltöffner).
3. Insert the thin end of the Gap Opener (Spaltöffner) into the gap between the frame surrounding the air vent and the dashboard. Insert the left edge of the ProClip into the gap next to the Gap Opener (Spaltöffner). Remove the Gap Opener (Spaltöffner).
4. The ProClip is in place