


Manual, Assembly instruction: Brodit 805305

Left mount

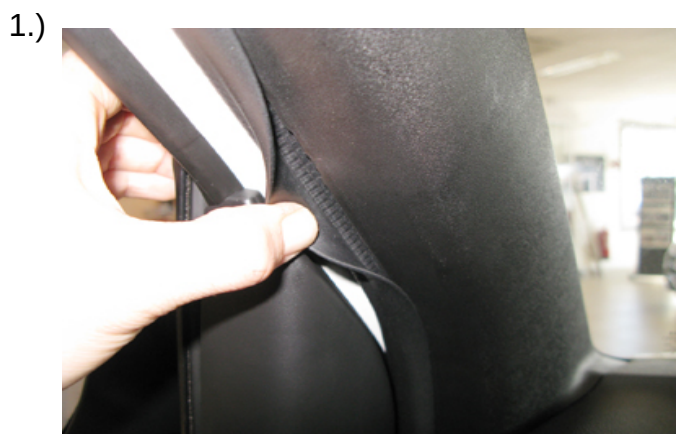

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Pull out the rubber sealant on the A-post slightly.
2. Press the angled edge on the lower part of the ProClip into the gap between the A-post and the rubber sealant and hook it around the A-post.
3. Press the ProClip forward/leftward so the angled upper edge hooks around the A-post.
4. The ProClip is in place.