


## Manual, Assembly instruction: Brodit 805732

Left mount

1.)



2.)

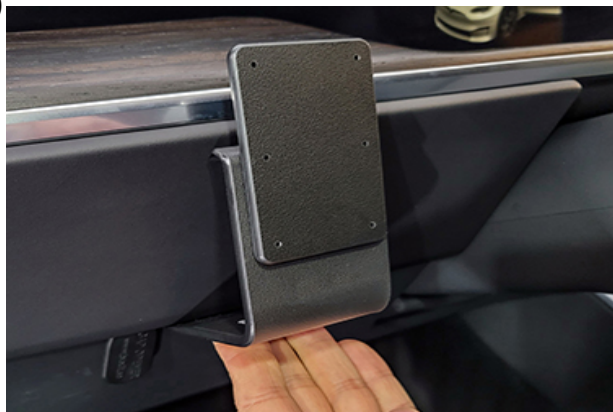

3.)



4.)



**Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip first: any holder & equipment is to be attached after the ProClip is in place.**

1. Press the thin end of the enclosed gap openers into the gap between the dashboard panels, to widen the gap.
2. Press the lower edge of the ProClip into the gap between the gap openers. Remove the gap openers,
3. Press the gap openers into the gap between the dashboard panel and the silver trim. Place your fingers on the back of the ProClip. Pull gently up and towards you until the upper edge is seated into the gap, between the gap openers. Remove the gap openers.
4. The ProClip is in place.