


Manual, Assembly instruction: Brodit 806055

Left mount

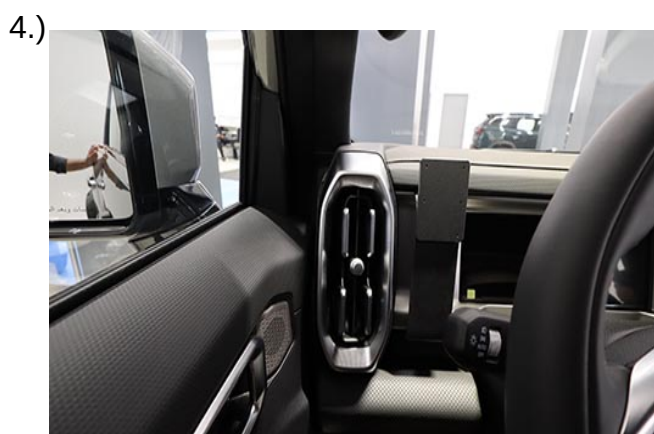

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder & equipment is to be attached after the mount is in place.

1. Press the thin end of the enclosed gap openers into the gap between the dashboard overhang and the panel, to widen the gap. Place the gap openers with sufficient distance so the mount can fit between them.

2. Press the lower edge of the mount onto the gap between the panel and the lower dashboard section.

3. Press forward on the upper part of the mount so the upper edge goes all the way into the gap between the gap openers. Pull out the gap openers.

4. The ProClip mount is in place.