



Manual, Assembly instruction: Brodit 806173

Left mount

1.)

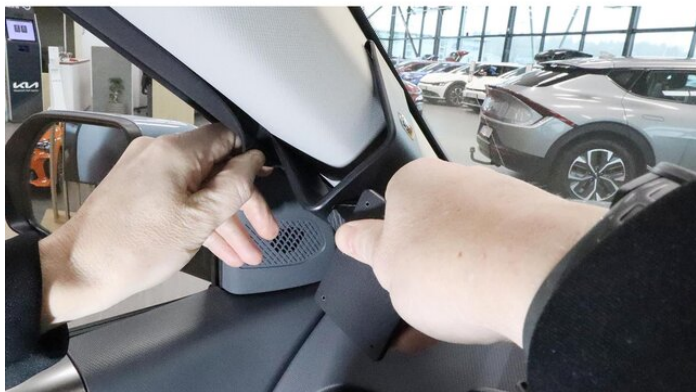

2.)

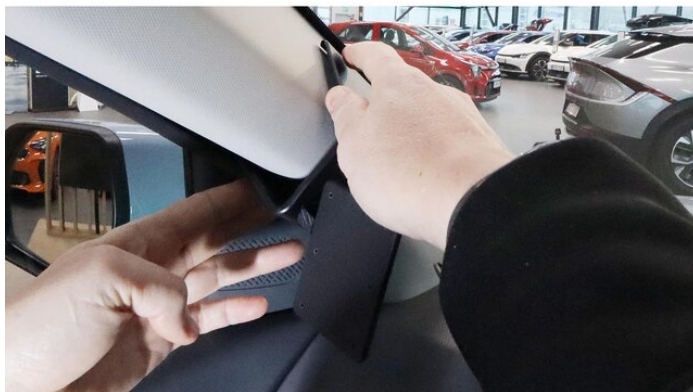

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Pull out the rubber sealant on the A-post slightly. Press the lower edge of the mount into the gap and hook it behind the A-post.
2. Press the mount upward + forward and hook the upper edge over the A-post.
3. Press the mount toward the A-post so the angled edge hooks into place properly.
4. The ProClip is in place.